
IMPORTANT!
ALLOW FOR AN EXPANSION GAP
all around the edges. Cover it with a piece of trim.

NAIL AT ANGLES
along inside edge of tongue; fasteners will be hidden as subsequent boards are installed.

USE 6 PENNY NAILS
Don't use brads unless it's for beadboard ceiling and soffits that are protected from the weather.

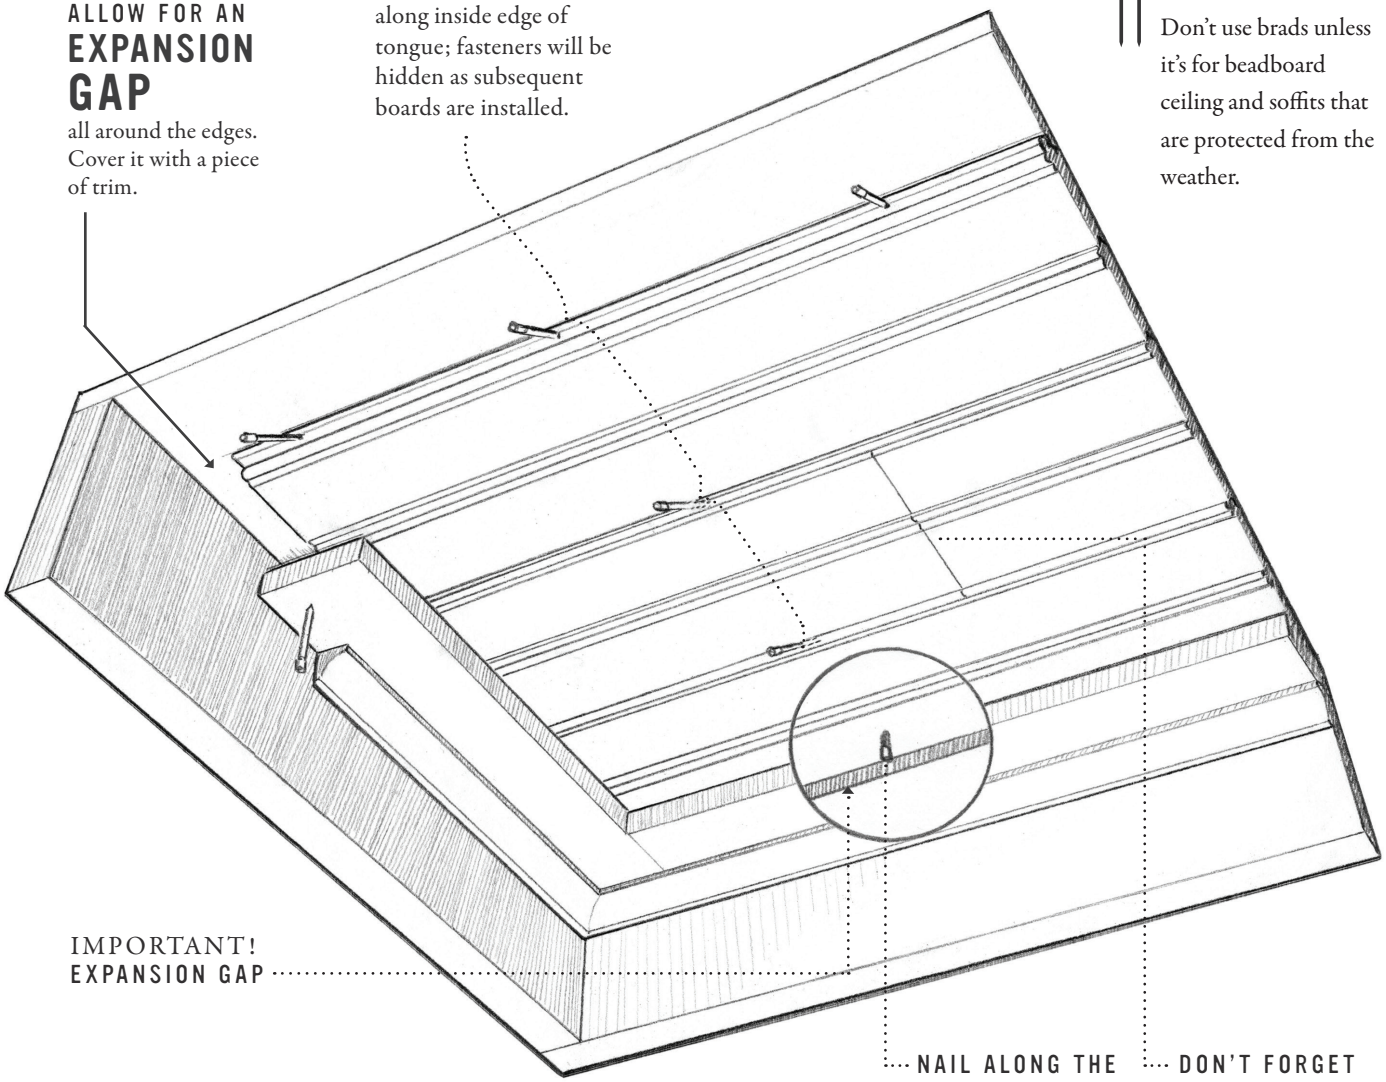

IMPORTANT!
EXPANSION GAP

NAIL ALONG THE FINISHED EDGE
(the "starter board") of beadboard in ceiling and soffits.

DON'T FORGET TO STAGGER JOINTS!
of beadboard in ceiling and soffits.

EXTERIOR T&G
CEILINGS & SOFFITS

Always isolate beadboard
from framing members and soffit/attic spaces. Moisture, humidity and any water intrusion will alter the moisture content of beadboard and could radically affect the installation.

Provide adequate ventilation
for all beadboard installations, and use best building practices to provide for normal swelling and shrinkage. Further protect against adverse swelling and shrinkage by breaking up long spans with beams or other decorative trim.

Other tips:

CHECK MOISTURE CONTENT For the exterior, never install beadboard with a moisture content higher than 18%. (For interiors, acclimate the beadboard until it reaches the in service moisture content of about 8%).

CHAMFER THE ENDS using a 45 chamfer bit on a router to accent the joints and allow the boards to move without affecting the overall appearance.

WINDSORONE
CRAFTSMANSHIP FIRST

HOUSEWRAP Prior to installing beadboards, soffits must be sheathed and wrapped with house wrap.

VENTILATION When wrapping soffits and exterior ceilings, take care not to block attic ventilation mechanisms.

NO CAULK OR GLUE Never caulk or glue beadboard tongue-and-groove joints.

30 YEAR WARRANTY IS ON PROTECTED BOARDS ONLY & IS BASED ON PROPER INSTALLATION

**visit WindsorONE.com/install for more information & FULL installation instructions.*